EXPLANATION OF MANUAL CONTENTS

Indicates procedures to be performed before the work in that section is started, and procedures to be performed after the work in that section is finished.

Component diagram

A diagram of the component parts is provided near the front of each section in order to give the reader a better understanding of the installed condition of component parts.

Maintenance and servicing procedures

The numbers provided within the diagram indicate the sequence for maintenance and servicing procedures. • Removal steps :

- The part designation number corresponds to the number in the illustration to indicate removal steps.
- Disassembly steps :
 - The part designation number corresponds to the number in the illustration to indicate disassembly steps.
- Installation steps :
 - Specified in case installation is impossible in reverse order of removal steps. Omitted if installation is possible in reverse order of removal steps.
- Assembly steps

Specified in case assembly is impossible in reverse order of disassembly steps. Omitted if assembly is possible in reverse order of disassembly steps.

Classifications of major maintenance / service points

When there are major points relative to maintenance and servicing procedures (such as essential maintenance and service points, maintenance and service standard values, information regarding the use of special tools, etc.). These are arranged together as major maintenance and service points and explained in detail.

<<A>>: Indicates that there are essential points for removal or disassembly.
>A<<: Indicates that there are essential points for installation or assembly.</p>

Symbols for lubrication, sealants and adhesives	
Symbols are used to show the locations for lubrication and for application of sealants and adhesives. These symbols are included in the diagram of compo- nent parts or on the page following the component parts page. The symbols do not always have accomp- anying text to support that symbol.	 Grease (Multi-purpose grease unless there is a brand or type specified)
	Sealant or adhesive
	🛔 : Brake fluid or automatic transmission fluid
	 Engine oil, gear oil or air conditioning com- pressor oil
	Adhesive tape or butyl rubber tape

AC102240AB

TSB Revision