


5 Check voltage between terminals VC and E2 of ECM connector.

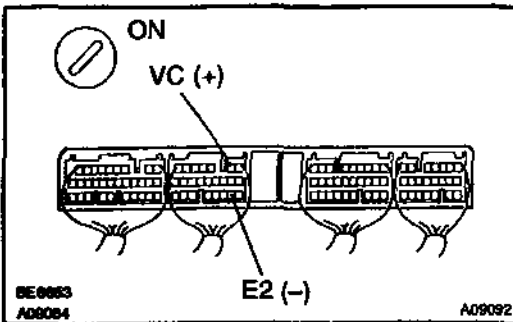

PREPARATION:

- (a) Remove the ECM cover.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminals VC and E2 of the ECM connector.

OK:

Voltage: 4.5 – 5.5 V

NG

Check and replace ECM (See page IN-30).

OK

**Check for open in harness and connector between ECM and sensor (VC line)
(See page IN-30).**