

1. GENERAL INFORMATION

1

| | | | |
|-----------------------------|-------------|--------------------------------------------|-------------|
| SERVICE RULES | 1-1 | LUBRICATION & SEAL POINTS | 1-19 |
| MODEL IDENTIFICATION | 1-1 | CABLE & HARNESS ROUTING | 1-23 |
| SPECIFICATIONS | 1-3 | EMISSION CONTROL SYSTEMS | 1-37 |
| TORQUE VALUES | 1-12 | EMISSION CONTROL INFORMATION LABELS | 1-40 |
| TOOLS | 1-17 | | |

SERVICE RULES

1. Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that do not meet Honda's design specifications may cause damage to the motorcycle.
2. Use the special tools designed for this product to avoid damage and incorrect assembly.
3. Use only metric tools when servicing the motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners.
4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
5. When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
7. After reassembly, check all parts for proper installation and operation.
8. Route all electrical wires as shown on pages 1-23 through 1-36, Cable and Harness Routing.

MODEL IDENTIFICATION

