

Engine Lubrication System

Table of Contents

Exploded View	6-2
Specifications	6-3
Transmission Oil	6-4
Oil Level Inspection	6-4
Oil Changing	6-4
Oil Pump and Carburetor Synchronization	6-5
Synchronization Inspection	6-5
Synchronization Adjustment	6-5
Engine Oil Pump	6-5
Bleeding the Oil Pump	6-5
Oil Pump Performance Test	6-6
Oil Pump Check Valve Inspection	6-6
Oil Pump Removal	6-7
Oil Pump Installation Notes	6-7
Oil Pump Assembly Caution	6-7
Engine Oil Tank	6-7
Engine Oil Tank Removal	6-7
Oil Tank Installation Notes	6-8