
Manual Outline

1 - Important Information

- A - Specifications
- B - Maintenance
- C - General Information
- D - Outboard Motor Installation

2 - Electrical

- A - Ignition
- B - Charging and Starting System
- C - Timing, Synchronizing, and Adjusting

3 - Electronic Fuel Injection

- A - Theory of Operation
- B - Diagnostics and Troubleshooting
- C - Service Procedures
- D - Emissions

4 - Powerhead

- A - Cylinder Head
- B - Cylinder Block/Crankcase
- C - Lubrication

5 - Mid-Section

- A - Clamp/Swivel Brackets and Driveshaft Housing
- B - Power Trim
- C - Gas Assist Manual Trim/Tilt

6 - Lower Unit

- A - Gear Housing - EZ Shift (1.83:1 Gear Ratio)
- B - Gear Housing - BigFoot EZ Shift (2.33:1 Gear Ratio)

7 - Attachments/Control Linkage

- A - Throttle/Shift Linkage
- B - Tiller Handle

8 - Jet Drive Outboard

- A - Jet Drive Outboard

Important Information

1

Electrical

2

Electronic Fuel Injection

3

Powerhead

4

Mid-Section

5

Lower Unit

6

Attachments/Control Linkage

7

Jet Drive Outboard

8