

HOW TO READ DESCRIPTIONS

1. A disassembly installation job mainly consists of the exploded diagram ①.
2. The numerical figures represented by the number ② indicates the order of the job steps.
3. The symbols represented by the number ③ indicates the contents and notes of the job. For the meanings of the symbols, refer to the next page(s).
4. The REMOVAL AND INSTALLATION CHART ④ is attached to the exploded diagram and explains the job steps, part names, notes for the jobs, etc.
5. The SERVICE POINTS, other than the exploded diagram, explains in detail the items difficult to explain in the exploded diagram or REMOVAL AND INSTALLATION CHART, the Service points requiring the detailed description ⑤, etc.

JET PUMP NOZZLE, DUCT AND INTAKE

NOZZLE, DUCT AND INTAKE EXPLoded DIAGRAM

6-3

JET PUMP NOZZLE, DUCT AND INTAKE

REMOVAL AND INSTALLATION CHART

Step	Procedure/Part name	Q'ty	Service points
NOZZLE, DUCT AND INTAKE DISASSEMBLY			Follow the left "Step" for removal. Refer to the "JET PUMP UNIT REMOVAL" section.
	Jet pump unit		
1	Bolt (with washer)	2	
2	Collar	2	
3	Nozzle deflector assembly	1	
4	Bolt	4	
5	Intake duct	1	
6	Pin	2	
7	Housing	1	
8	Pin	2	
9	Impeller duct assembly	1	
10	Pin	2	
11	Nozzle	1	
12	Bolt (with washer)	1	
13	Spacer	1	
14	Oil seal	2	
15	Bushing	1	
16	Bolt (with washer)	6	
17	Intake screen	1	
NOZZLE DEFLECTOR DISASSEMBLY			
①	Bolt (with washer)	2 6 × 20 mm	
②	Collar	2	
③	Nut	1 M6	
④	Plate washer	2	
⑤	Ball joint	1 M6	
⑥	Nozzle deflector	1	
⑦	Nut	1 M8	
⑧	Plate washer	2	
⑨	Ball joint	1 M8	
⑩	Trim ring	1	
			Reverse the removal steps for installation.

6-4