

---

# TABLE OF CONTENTS

---

<b>SAFETY NOTICE</b> .....	<b>XIII</b>
<b>INTRODUCTION</b> .....	<b>XIV</b>
VEHICLE IDENTIFICATION NUMBER.....	XV
ENGINE SERIAL NUMBER .....	XVI
LIST OF ABBREVIATIONS USED IN THIS MANUAL.....	XVI
ARRANGEMENT OF THIS MANUAL .....	XVIII
GENERAL INFORMATION.....	XX
ILLUSTRATIONS AND PROCEDURES .....	XX
SELF-LOCKING FASTENERS PROCEDURE .....	XX
LOCTITE APPLICATION PROCEDURE.....	XX
THREADLOCKER .....	XXI
STRIPPED THREAD REPAIR .....	XXII
GASKET COMPOUND .....	XXIII
MOUNTING ON SHAFT .....	XXIII
CASE-IN COMPONENTS .....	XXIV
TIGHTENING TORQUES .....	XXIV
<b>01 SERVICE TOOLS AND SERVICE PRODUCTS</b> .....	
<b>01 – SERVICE TOOLS</b> .....	<b>1</b>
ENGINE — MANDATORY TOOLS .....	1
ENGINE — RECOMMENDED TOOLS.....	4
TRANSMISSION — MANDATORY TOOLS .....	9
TRANSMISSION — RECOMMENDED TOOLS.....	10
SUSPENSION — MANDATORY TOOLS .....	14
SUSPENSION — RECOMMENDED TOOLS.....	15
VEHICLE — RECOMMENDED TOOLS.....	18
<b>02 – SERVICE PRODUCTS</b> .....	<b>21</b>
<b>02 MAINTENANCE</b> .....	
<b>01 – MAINTENANCE CHART</b> .....	<b>29</b>
<b>02 – STORAGE</b> .....	<b>33</b>
GENERAL .....	33
FUEL STABILIZER.....	33
ENGINE LUBRICATION .....	33
ENGINE COMPARTMENT .....	34
PULLEY PROTECTION.....	34
COUNTERSHAFT LUBRICATION .....	34
BATTERY.....	34
VEHICLE CLEANING.....	34
RAGS IN AIR INTAKE AND EXHAUST SYSTEM .....	34
VEHICLE PROTECTION.....	34
FUEL STABILIZER.....	34
COOLING SYSTEM .....	35
ENGINE OIL CHANGE AND FILTER .....	35
ENGINE LUBRICATION .....	35
ENGINE COMPARTMENT .....	36
PULLEY PROTECTION.....	36
BATTERY.....	36
VEHICLE CLEANING.....	36
RAGS IN AIR INTAKE AND EXHAUST SYSTEM .....	36
VEHICLE PROTECTION.....	36