



h. Install the handlebar cover.



Handlebar cover screw:
1.1 N • m (0.11 kgf • m, 0.8 ft • lb)
LOCTITE 242

i. Install the ribbon sub assemblies and air filter case cover.




Ribbon sub assembly bolt:
6.5 N • m (0.65 kgf • m, 4.7 ft • lb)
LOCTITE 242

Air filter case cover screw:
2.5 N • m (0.25 kgf • m, 1.8 ft • lb)
LOCTITE 572

⚠ WARNING

After adjusting the free play, turn the handlebar to the right and left and make sure that the trolling speed does not increase.

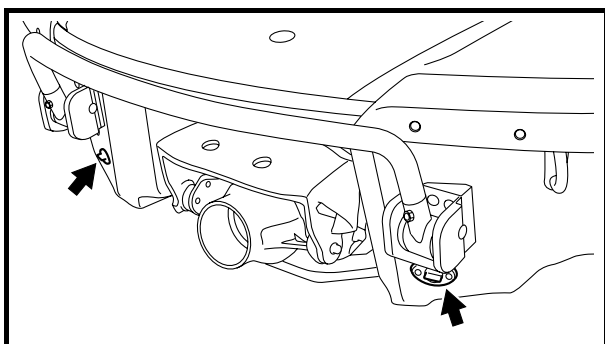

GENERAL

Drain plug inspection

1. Inspect:
 - Drain plugs
Cracks/damage → Replace.
 - O-rings
Cracks/wear → Replace.
 - Screw threads
Contaminants → Clean.